



<b>Part Number</b>	<b>Description</b>	<b>Price</b>
4140	VALVE	RFQ
13445	COMPONENT	RFQ
14936	HEAT SHIELD	RFQ
14938	HEAT SHIELD	RFQ
14940	HEAT SHIELD	RFQ
23328	COVER	RFQ
25471	STRAP	RFQ
AN5822-1	FILTER	RFQ
38414	HEAT SHIELD	RFQ
41017	landing gear scissor part	RFQ
50388	PISTON	RFQ
105290	COMPONENT	RFQ
0843538-8	COMPONENT	RFQ
1154-4290	COMPONENT	RFQ
121-34508	CABLE ASSEMBLY	RFQ
121-34511	RETAINER ASSEMBLY	RFQ
121-58026	LINES	RFQ
12848A	HEAT SHIELD	RFQ
121-51029	BEAM ASSEMBLY	RFQ
168-31006	BAFFLE ASSEMBLY	RFQ
168-33532	STOP ASSEMBLY - LANDING GEAR COCKPIT CONTROL HANDLE	RFQ
168-33567	SUPPORT - ALIGHT GEAR EMERG. DOWN LOCK HANDLE	RFQ
168-40018	COMPONENT	RFQ
168-48005	SUMP - AUX FUEL SYSTEM	RFQ
168-48006	FITTING ASSEMBLY - AUX FUEL TANK VENT	RFQ
168-51801	LINE ASSEMBLIES	RFQ
168-52104	SOCKET ASSEMBLY - REAR COCKPIT CONTROLS	RFQ
168-52112	TUBE ASSEMBLY	RFQ
168-52602	HANDLE ASSEMBLY FLAP CONTROL FRONT COCKPIT	RFQ
168-53013	FITTING - REAR COCKPIT SEAT SUPPORT UPPER	RFQ
176-68701-10	COMPONENT	RFQ
19-33461	RING - BRAKE MASTER CYLINDER SPRING RETAINER	RFQ
19-35045-1	COMPONENT	RFQ
19-43008	BRACKET - BELLCRANK SUPPORT	RFQ
19-48005	SUMP - FUEL TANK	RFQ

19-48013	RING - FUEL TANK FILLER NECK	RFQ
19-48015-2	BASE- FUEL COCK CONTROL GEAR	RFQ
19-48015-3	COVER - FUEL COCK CONTROL GEAR	RFQ
19-52113	STICK - COCKPIT CONTROL	RFQ
19-52119	HOUSING - CONTROL SURFACE LOCK	RFQ
19-52455	LINK - RUDDER PEDAL LOCK	RFQ
19-52456	WASHER - RUDDER PEDAL LOCK LINK	RFQ
19-52518	COMPONENT	RFQ
19-53005	BRACKET	RFQ
19-53048-1	CLAMP	RFQ
19-53506	BRACKET	RFQ
19-54021	SHIELD	RFQ
23-43005	SUPPORT	RFQ
23-52123	HANDLE	RFQ
25-47014-14	STRAP ASSEMBLY	RFQ
25-58014	LINER	RFQ
25-58018	PISTON	RFQ
25-58063	BRACKET ASSEMBLY	RFQ
25-58065	KNOB - HYDRAULIC HAND PUMP CONTROL HANDLE	RFQ
25-58067	SPRING - HYDRAULIC HAND PUMP CONTROL HANDLE	RFQ
28-13046	COMPONENT	RFQ
28-43006	BRACKET	RFQ
28-43014-2	BELLCRANK ASSEMBLY	RFQ
28-43015	BRACKET	RFQ
28-48027	FITTING	RFQ
31487-21418	COMPONENT	RFQ
32-51012	COMPONENT	RFQ
35961-229	COVER	RFQ
35961-4290	GOVERNOR COVER	RFQ
36-31055-2	LUG ASSEMBLY	RFQ
36-31221	LUG ASSEMBLY	RFQ
36-31114	LUG	RFQ
36-33118	COMPONENT	RFQ
36-33403	COMPONENT	RFQ
36-33404	BRACKET - PARKING BRAKE CONTROL CABLE PULLEY	RFQ
36-33510	BELLCRANK	RFQ
36-33514-1	ARM	RFQ
36-33515-1	LATCH	RFQ
36-33530-1	BEARING - LANDING GEAR AD FLAP POSITION INDICATOI	RFQ
36-33530-2	BEARING - LANDING GEAR AD FLAP POSITION INDICATOI	RFQ
36-34005-4	HOUSING ASSEMBLY - TAIL WHEEL KNUCKLE	RFQ
36-43008	COMPONENT	RFQ
36-43011	BELLCRANK	RFQ
36-43011-2	BELLCRANK	RFQ

36-43017	BRACKET - CARB. AIR CONTROL UPPER BELLCRANK	RFQ
36-44007	BRACKET - PROP CONTROL FRONT BELLCRANK SUPPORT	RFQ
36-47004	STANDPIPE - OIL TANK SUMP	RFQ
36-47027-26	STAP ASSEMBLY	RFQ
36-47027-32	STAP ASSEMBLY	RFQ
36-47027-34	STAP ASSEMBLY	RFQ
36-47087-32	STAP ASSEMBLY	RFQ
36-48017-2	STAP ASSEMBLY	RFQ
36-48018	STRAP ASSEMBLY - FUEL TANK	RFQ
36-48018-4	STRAP ASSEMBLY - FUEL TANK	RFQ
36-48028	BELLCRANK ASSEMBLY - HAND FUEL PUMP CONTROL	RFQ
36-48029	BRACKET - HAND FUEL PUMP BELLCRANK SUPPORT	RFQ
36-48029	BRACKET - HAND FUEL PUMP BELLCRANK SUPPORT	RFQ
36-48035	SUPPORT ASSEMBLY - FRONT COCKPIT FUEL CLOCK DIAL	RFQ
36-48036-2	SUPPORT ASSEMBLY - REAR COCKPIT FUEL CLOCK DIAL	RFQ
36-48046	HANDLE ASSEMBLY - HAND FUEL PUMP CONTROL	RFQ
36-51050	PLATE - MANIFOLD PRESSURE VENT AND GYRO SELECTOR	RFQ
36-52507-2	BLOACK - CONTROL QUADRANT SHAFT SUPPORT	RFQ
36-52617	BEARING - FLAP CONTROL AND LANDING GEAR LEVER RE	RFQ
36-52625	ROD ASSEMBLY - FLAP EQUALIZER CONTROL	RFQ
AN5816-2	PITOT TUBE	RFQ
38442D	HEAT SHIELD	RFQ
38443A	HEAT SHIELD	RFQ
38443B	HEAT SHIELD	RFQ
38705B	HEAT SHIELD	RFQ
41017-B	COMPONENT	RFQ
45-33451	COMPONENT	RFQ
45-48407-9	LINE	RFQ
45-51801-67	COMPONENT	RFQ
49-31860-3	COMPONENT	RFQ
49-48025	BRACKET	RFQ
49-51024-1	COMPONENT	RFQ
49-54045	BELLCRANK	RFQ
51-58101-9W	COMPONENT	RFQ
52-210207	COMPONENT	RFQ
52-52103	SOCKET ASSEMBLY	RFQ
52-52105-2	COMPONENT	RFQ
52-52107	STOP - CONTROL STICK AILERON TORQUE TUBE	RFQ
54-33527	COMPONENT	RFQ
54-58077	SUPPORT	RFQ
54-58104-3	COMPONENT	RFQ
5-470-8	COMPONENT	RFQ
55-14066	BRACKET	RFQ
55-14066-1-D	COMPONENT	RFQ

55-14114	RIB - TING TIP TRAILING	RFQ
55-16031-4	COMPONENT	RFQ
55-1869	COMPONENT	RFQ
55-21013	RIB - HORIZONTAL STABILIZER OUTBOARD	RFQ
55-31006-2	BAFFLE ASSEMBLY	RFQ
55-31006-3	BAFFLE ASSEMBLY	RFQ
55-310105-3	COMPONENT	RFQ
55-31097	COVER	RFQ
55-31195	BRACKET	RFQ
55-31196-2	BRACKET	RFQ
55-313113	COMPONENT	RFQ
55-33406	BRACKET	RFQ
55-33406-1	BRACKET	RFQ
55-3343	COMPONENT	RFQ
55-33434	BRACKET	RFQ
55-33434-1	BRACKET	RFQ
55-33504	LOCK PIN ASSEMBLY	RFQ
55-33505	SOCKET ASSEMBLY	RFQ
55-33507	GRIP - LAND GEAR FRONT COCKPIT CONTROL HANDLE	RFQ
55-33512	HANDLE ASSEMBLY	RFQ
55-33527	ARM ASSEMBLY	RFQ
55-33546	BELLCRANK	RFQ
55-33560	SECTOR ASSEMBLY	RFQ
55-33571	SECTOR ASSEMBLY	RFQ
55-33583	SECTOR ASSEMBLY	RFQ
55-33588	COMPONENT	RFQ
55-40312-1	COMPONENT	RFQ
55-42032	BELLCRANK - HOT AND COLD AIR GATE CONTROL	RFQ
55-42057	COMPONENT	RFQ
55-42076	HOSE OIL COOLER	RFQ
55-42082	TUBE - MAGNETO COOLING INTERMEDIATE	RFQ
55-43012	BELLCRANK	RFQ
55-43013	BELLCRANK	RFQ
55-43030	BELLCRANK	RFQ
55-44008-2	BELLCRANK	RFQ
55-44011	BELLCRANK	RFQ
55-44408-2	COMPONENT	RFQ
55-51023-3	COMPONENT	RFQ
55-52209	BRACKET	RFQ
55-52302	BELLCRANK	RFQ
55-52409	BRACKET	RFQ
55-52421	BRACKET	RFQ
55-52422	BRACKET	RFQ
55-52423	BRACKET	RFQ

55-52423-1	BRACKET	RFQ
55-52515-2	WHEEL ASSEMBLY - ELEVATOR TRIM TAB CONTROL	RFQ
55-52515-3	CASTING - ELEVATOR TRIM TAB CONTROL	RFQ
55-52546	BRACKET	RFQ
55-52546-2	BRACKET	RFQ
55-52547-3	BRACKET	RFQ
55-52610	ARM ASSEMBLY	RFQ
55-52613	SHAFT ASSEMBLY - FLAP CONTROL AND LANDING GEAR L	RFQ
55-52614	BRACKET	RFQ
55-52615	SHAFT ASSEMBLY	RFQ
55-52617	COMPONENT	RFQ
55-52621	HANDLE ASSEMBLY	RFQ
55-52626	BEARING	RFQ
55-53329	CLAMP	RFQ
55-53336	FITTING	RFQ
55-53337	VALVE	RFQ
55-53338	TUBE	RFQ
55-55209	COMPONENT	RFQ
55-58024	PUMP ASSEMBLY	RFQ
55-58111	FILLER	RFQ
55-58135	COMPONENT	RFQ
55-58136	HEAD - HYDRAULIC HAND PUMP	RFQ
55-58139	RETAINER ASSEMBLY	RFQ
55-58160	BRACKET	RFQ
55-58164	SHAFT ASSEMBLY	RFQ
55-58165-2	FAILEAD	RFQ
55-58525	LINE ASSEMBLY	RFQ
55-61012	SUPPORT	RFQ
55-71063-1	SUPPORT	RFQ
58-42029	WASHER	RFQ
58-42094	CAM - CARBURETOR AIR FILLER LOCATING	RFQ
58-47023	FLANGE	RFQ
58-48025	BOSS - FULE TANK VENT LINE	RFQ
58-48028	PLATE	RFQ
59-31868-8	COMPONENT	RFQ
59-42103	BRACKET	RFQ
59-73036	BRACKET	RFQ
63-06110-1	BRACKET	RFQ
63-06111-1	BRACKET	RFQ
63-06112-1	BRACKET	RFQ
63-06112-G	BRACKET	RFQ
63-06170	BRACKET	RFQ
63-06170-5	BRACKET	RFQ
63-08014-0	GLASS ASSEMBLY OUTER WING LANDING LIGHT	RFQ

63-2203-1	COMPONENT	RFQ
63-22304-3	COMPONENT	RFQ
63-31401-17	INSTALLATION - TAIL CONE	RFQ
63-32103	GUSSET	RFQ
63-46002	ARM	RFQ
63-46003G	ARM	RFQ
63-46115-2	HOUSING - TAIL WHEEL POST	RFQ
63-58007	COMPONENT	RFQ
63-58128	CLAMP	RFQ
63-59105	BRACKET	RFQ
63-63002	TANK ASSEMBLY - OIL	RFQ
63-64009	HANDLE	RFQ
63-64311	BRACKET	RFQ
63-64312	BRACKET	RFQ
63-67105	SUPPORT	RFQ
63-69009-14	BRACKET	RFQ
63-69104	BELLCRANK	RFQ
63-70005E	HINGE	RFQ
63-70010	ARM ASSEMBLY	RFQ
63-72006-G	SUPPORT	RFQ
63-72105	CRANK	RFQ
63-72304-3	HOUSING ASSEMBLY	RFQ
63-77102	HOUSING ASSEMBLY	RFQ
65-42016	DUCT - OIL COOLER SUPPORT	RFQ
66-13090	FITTING - WING CENTER SECTION FRONT SPAR ATTACHIN	RFQ
66-31074-2	LATCH ASSEMBLY	RFQ
66-33307	HINGE - LANDING GEAR FAIRNG	RFQ
66-33509-10	SUPPORT	RFQ
66-42004	CHAMBER ASSEMBLY - CARB AIR MIXING	RFQ
66-42006	SHUTTER ASSEMBLY - OIL COOLER	RFQ
66-42009	SUPPORT ASSEMBLY	RFQ
66-42013	SHUTTER ASSEMBLY - OIL COOLER	RFQ
66-42014	SHAFT ASSEMBLY - OIL COOLER SHUTTER IDLER CONTROL	RFQ
66-42017	HOUSING - OIL COOLER SHUTTERS	RFQ
66-42020	SHUTTER - OIL COOLER	RFQ
66-42087	BRACE ASSEMBLY	RFQ
66-58026	STRUT ASSEMBLY - LANDING GEAR OPERATING	RFQ
66-58128	BOOT	RFQ
66-58167-2	COMPONENT	RFQ
66-58186-2	BEARING	RFQ
66-58187-2	BEARING	RFQ
66-58187-3	BEARING	RFQ
66-58201	COMPONENT	RFQ
66-58206	BRACKET	RFQ

68156-6	COMPONENT	RFQ
72-58508	LINE ASSEMBLY	RFQ
77-31377	HOUSING - FUSELAGE FRONT STEP	RFQ
77-43010	FAIRLEAD ASSEMBLY - ENGINE CONTROLS	RFQ
77-43030-2	BELLCRANK	RFQ
77-44026	BELLCRANK	RFQ
77-47002	TANK ASSEMBLY - OIL	RFQ
77-47801	LINE - OIL ENGINE TO DRAIN VALVE	RFQ
77-47802	LINE - OIL ENGINE TO DRAIN VALVE	RFQ
77-48018	DIAL ASSEMBLY - FUEL COCK CONTROL	RFQ
77-48807	LINE	RFQ
77-48810	LINE	RFQ
77-51020	BLOCK	RFQ
77-51801	LINE	RFQ
77-52105	BRACKET	RFQ
77-53305	HEATER ASSEMBLY - COCKPIT UPPER	RFQ
77-58521	LINE ASSEMBLY	RFQ
77-58526	LINE ASSEMBLY	RFQ
77-71070	SUPPORT	RFQ
78-430-4	COMPONENT	RFQ
78-58147	ARM	RFQ
84-63151	BRACKET	RFQ
88-14066	BRACKET	RFQ
88-21493-2	COMPONENT	RFQ
88-23012	FITTING	RFQ
88-28018	COMPONENT	RFQ
88-31006-5	BAFFLE ASSEMBLY	RFQ
88-31439-2	COMPONENT	RFQ
88-31493-2	BRACKET	RFQ
88-31494-4	BRACKET	RFQ
88-33516	ROD ASSEMBLY	RFQ
88-33539	ROD ASSEMBLY - LANDING GEAR UP POSITION LATCH CO	RFQ
88-34015-2	EXTENSION - TAIL WHEEL KNUCKLE	RFQ
88-34151	BELLCRANK - TAIL WHEEL STERRING LINAGE LOWER	RFQ
88-34165	SUPPORT	RFQ
88-34169	BELLCRANK	RFQ
88-42052	TUBE - MAGNETO COOLING FRONT	RFQ
88-42084	COMPONENT	RFQ
88-42801	LINE	RFQ
88-43026	PLATE - OIL COOLER SHUTTER CONTROL QUADRANT NAM	RFQ
88-47802	LINE	RFQ
88-47804	LINE	RFQ
88-48821	LINE	RFQ
88-51493-2	COMPONENT	RFQ

88-51805	LINE	RFQ
88-51868	LINE - AIR FILTER TO REAR COCKPIT TEE	RFQ
88-52474-1	GUARD	RFQ
88-52487	LINK	RFQ
88-53071	BASE	RFQ
88-53078	COMPONENT	RFQ
88-53089-4	BAR ASSEMBLY	RFQ
88-53162	GUIDE	RFQ
88-53339	TUBE ASSEMBLY - HEATING SYSTEM FIREWALL TO VALVE	RFQ
88-54004	BOX ASSEMBLY - REAR COCKPIT	RFQ
88-54005	SUPPORT - BATTERY	RFQ
88-54372-6	BOX ASSEMBLY	RFQ
88-54840	TUBE ASSEMBLY	RFQ
88-58210	ROD	RFQ
88-58223	GASKET	RFQ
88-58226	ARM STOP	RFQ
88-58310	NEEDLE ASSEMBLY	RFQ
88-61006	BRACKET - FIXED GUN SHELF LEFT SUPPORT	RFQ
88-66005	BRACKET - GUN CAMERA FRONT SUPPORT	RFQ
88-71083	SUPPORT - RADIO AND INTERPHONE JACK BOX	RFQ
88-71262	SHELF - MARKER BEACON RECEIVER AND JUNCTION BOX	RFQ
88-71267	SUPPORT - RADIO COMMAND SHELF FRONT	RFQ
97-34120	tail wheel steering mast assy	RFQ
D-13-1	COMPONENT	RFQ
EA-504BP-700	LIQUIDOMETER	RFQ
F3993-5	COMPONENT	RFQ
MS20257	HINGE	RFQ
77-34102	STRUT ASSEMBLY	RFQ
121-13000	WING SECTION	RFQ
121-13001	WING	RFQ
P356-840-17	COMPONENT	RFQ
P4CA	PUMP	RFQ
TYPE C-2A	FUEL STRAINER	RFQ
TYPE C-4	FUEL STRAINER	RFQ
NOS 12D40 PROPELLER COMPONENTS		

**AND SO MUCH MORE!**

**If you do not see what you are looking for on this list, please send us an email at [team@fagenfighters.com](mailto:team@fagenfighters.com) or call 320-435-0514.**